Autex Acoustics

Grid Ceiling Tiles are designed to be installed in standard 24 mm and 15 mm suspended ceiling systems. These Install Instructions are of a general nature and are designed to assist suitably experienced tradespeople in the installation of Grid Ceiling Tiles to a high standard.

For installation support, contact your Autex Acoustics[®] account manager before you start. Take care when working around electrical wiring and other services. Treat all wires as live.

Manufacturer's documents	Autex Acoustics recommends that all persons engaged in the installation have full knowledge of the product and installation procedure as set out in the most recent edition of the manufacturer's instructions and related documents.	
	Manufacturer's documents relating to work in this section are:	
	Grid Ceiling Tiles Data Sheet	
	Autex Acoustics Care and Maintenance Guide	
	Copies of the above documents are available on request or from the Autex Acoustics website autexglobal.com	
Inspection	Before installing Grid Ceiling Tiles check that the materials have been supplied as ordered	we do not recommend installing different batch lots as this could result in colour variation.
	and are free from damage or faults. Check product labels to ensure product has been supplied correctly.	Any variations must be reported to Autex Acoustics prior to commencing the installation. No claims will be accepted where the job
	It is important to check that all boxes are supplied from one batch. Due to batch to batch variations,	continues with obvious faults, and no consultation with Autex Acoustics has taken place.
Transportation, storage and handling	Grid Ceiling Tiles must be transported, stored, and handled with care. Avoid delamination or distortion and protect edges from being crushed.	Acoustics. Always transport and store Grid Ceiling Tiles on a flat, clean, dry surface. Do not lay the tiles on their sides or crush as this will cause creases in the tile finish.
	Do not accept damaged tiles. If product arrives damaged, note the condition on the freight documents and contact Autex Acoustics immediately. Goods signed as received in 'good condition' will not be the responsibility of Autex	The use of Personal Protection Equipment is not required to handle Grid Ceiling Tiles, though care must be taken to keep the job clean, and the use of cotton gloves is recommended.
Recommended tools	Soft cotton gloves	
	Sharp utility knife	
	• Ladder	
Site preparation	The site conditions at time of installation should be clear of dust, debris, and foreign particles. Installation should only commence once the building is fully clad, water-tight, dry, and all wet processes have been completed.	
Service	For more information contact your Autex Acoustics account manager or visit our website autexglobal.com	

Assembly of Grid Ceiling Tiles

For easy handling and sorting, tile profiles are supplied as connected, nested flat sheets.


Slot profile blades together as indicated in the reference images.

 
Linear


Louvre

Note, configurations will vary slightly from these images depending if the specification is uncapped, flush, or a differing size. The assembly method will still remain consistent for each style.


Hatch

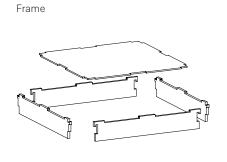 


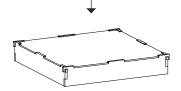

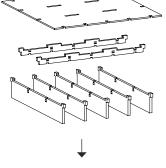





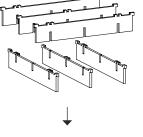


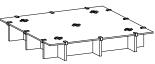


Angle

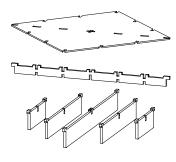


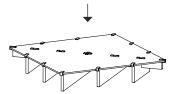 

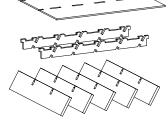


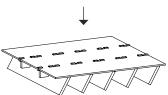  



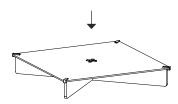

Vault

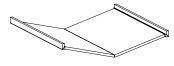 

autexglobal.com




Installation of Grid Ceiling Tiles


Before installing your tiles, it is important to ensure the grid has been installed in accordance with the local Building Code, as per the manufacturer's specification, and is true and square.

Install all fittings and fixtures including those with penetrations through ceiling tiles, i.e. heat sensors, sprinkler heads, and light fittings.

Note: Suspended ceiling systems must be installed in accordance with current building code requirements and AS/NZS 2785.

Slightly tilt the tile and angle it through the ceiling grid, then gently place it into position.

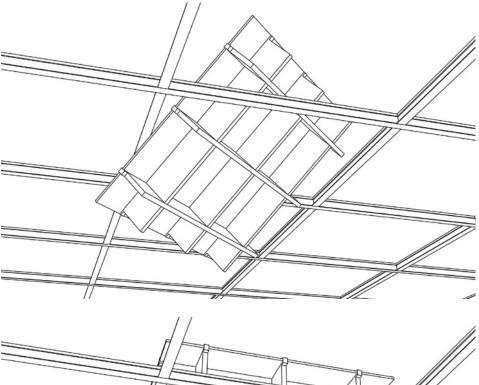

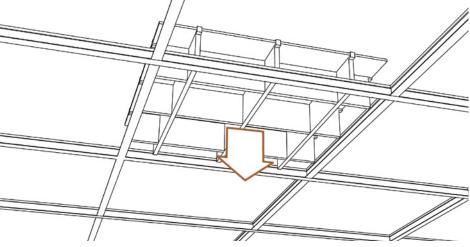

To remove tiles and access above the grid, simply reverse the process described above.

Leave work to the standard required by following procedures. Leave work secure, smooth and free of gaps, stains, and blemishes.

Clean adjoining surfaces of any dust. Remove debris, unused materials, packaging, and waste from site.

New Zealand

On completion

702-718 Rosebank Road, Private Bag 19988 Avondale 1746, Auckland T 0800 428 839 T +64 9 828 9179 autexacoustics.co.nz

Australia 285 Swan Street, Richmond, VIC 3121 T 1800 678 160

Richmond, VIC 3121 T 1800 678 160 T +61 3 9450 6700 autexacoustics.com.au United Kingdom
Unit J4, Lowfields Way,
Lowfields Business Park,
Elland, West Yorkshire
HX5 9DA
T +44 0 142 241 8899
autexacoustics.co.uk

 United States
 1630 Dan Kipper Drive, Riverside, CA 92507
 T +1 424 203 1813
 autexacoustics.com

Autex is an ISO certified organisation encompassing Quality (ISO 9001), Environmental (ISO 14001), and Health and Safety (ISO 45001). Brand names and logos are registered or unregistered trademarks owned or used under license by Autex Industries Limited or other members of the Autex Group. © Copyright 2024 Autex Industries Ltd. All rights reserved. It is the user's responsibility to determine if the product and information presented in this document is suitable for the intended application by engaging a suitably qualified consultant. The information contained in this document is correct to the best of our knowledge at the date of its publication. To verify that this document is the most current publication please check our website or contact your Autex Acoustics account manager.